

# How to configure elevator control using an LNL-1320

Last Modified on 06/06/2025 2:53 pm EDT

How to configure elevator control using an LNL-1320

## Procedure Steps

- 1) In System Administration, on the appropriate Access Panels tab, select the check box for **Elevator Control** to enable this feature.
- 2) On the Readers tab, select the reader you wish to modify.
- 3) Select the check box for **Elevator**. This causes the LNL-1320 to behave as an elevator reader board.
  - All six outputs will be used as elevator outputs
  - None of the inputs may be used
  - Only one reader is able to be configured for the board
  - Floor tracking is not available
- 4) Configure the elevator control levels for access levels as a normal elevator configuration.

## Applies To

OnGuard (All versions)

## Additional Information

None

---