

# How to configure the LNL-2220 or LNL-3300 for direct connect

Last Modified on 01/12/2022 12:32 pm EST

How to configure the LNL-2220 or LNL-3300 for direct connect

## Procedure Steps

Configure the control panels as direct connect using the Configuration Web Page.

**Note:** In order to connect to the web interface for the controllers, refer to the Hardware Installation Guide for network connection (DHCP, static IP, or the temporary IP address of 192.168.0.251).

1. Use a browser to go to the web page and log in.
2. Select **HostPort**.
3. For connection type, select **Serial-RS232**.
4. For the baud, select **38400**.
5. The following is the direct connect RS-232 pin-out for 9-pin and 25-pin connectors.

□

## Applies To

LNL-2220

LNL-3300

## Additional Information

None

