

# How to determine the firmware revision of USRobotics 56K V.92 external modems

Last Modified on 01/12/2022 1:12 pm EST

How to determine the firmware version of USRobotics 56K V.92 external modems

## Procedure Steps

Obtaining the firmware version requires a HyperTerminal session on the server side.

- 1) Click the Start button, and then select **All Programs > Accessories > Communications > HyperTerminal**.
- 2) If the host modem is connected via a serial cable, then select COM1.
- 3) Type in a name for the HyperTerminal session.
- 4) Select COM1.
- 5) If the modem is connected to the server via an RJ-11 phone line, enter the information for the phone line associated with the modem.
- 6) Once connected, type the command ATi7 and press .

The firmware version will be displayed.

## Applies To

USRobotics 56K V.92 external modems

## Additional Information

None

---