

# How to uninstall LDVR firmware

Last Modified on 12/01/2021 11:49 am EST

How to uninstall LDVR firmware

## Procedure Steps

1) In **Control Panel > Add or Remove Programs**, remove LDVR , where is the version of LDVR firmware.

2) Delete the following folders:

- C:\Program Files\Common Files\Lenel
- C:\Program Files\Lenel Systems

**Note:** Some folders may not exist, depending on the version of LDVR firmware.

**Important:** Modifying the registry could cause irreversible damage to your Windows operating system; be sure to back up the registry before making any changes. Follow the instructions located at: <http://support.microsoft.com/kb/322756>.

3) Open the Registry Editor and delete the following entries:

- HKEY\_CURRENT\_USER\Software\Darim Vision
- HKEY\_CURRENT\_USER\Software\Spider
- HKEY\_CURRENT\_USER\Software\Lenel
- HKEY\_LOCAL\_MACHINE\Software\Darim Vision
- HKEY\_LOCAL\_MACHINE\Software\Lenel

**Note:** Some keys may not be installed, depending on the version of LDVR firmware.

4) Reboot the computer.

## Applies To

LDVR (All Versions)

## Additional Information

None

---