

# How to Extend Relay Output Time for Elevator Hardware

Last Modified on 06/06/2025 2:23 pm EDT

How to Extend Relay Output Time for Elevator Hardware

## Procedure Steps

In some elevator systems, it is necessary to set the relay output time for a longer period.

To configure the relay output time, follow the steps below.

- 1) In System Administration, from the **Access Control** menu, select **Readers**.
- 2) Select the elevator reader.
- 3) Click **Modify**.
- 4) Enter the **Strike Time** in seconds. The default value is 3 seconds.
- 4) Click **OK** to save the change.

Note: These steps will change the relay output time for all outputs that are used as elevator hardware, including outputs on LNL-1200 alarm output panels and LNL-1320 reader interface modules.

## Applies To

OnGuard (All versions)

## Additional Information

None

---