

# What is the recommended free space setting for an LNVR storage drive?

Last Modified on 01/12/2022 3:32 pm EST

## Question

What is the recommended free space setting for an LNVR storage drive?

## Answer

The recommended free space for an LNVR storage drive is 10%.

This amount will ensure that large read, write, and delete actions complete reliably and correctly on the LNVR.

The free space setting is configured when installation of the Lenel Network Video Suite is complete and the LNVR Storage window is displayed. The **Leave Free Space (MB)** field should be set to a value in megabytes that is 10% of the total space on the storage drive.

## Applies To

LNVR (All versions)

## Additional Information

None

---