

How to connect and initially configure an LNL-2220 or LNL-3300 via the Web configuration page

Last Modified on 06/03/2025 8:59 am EDT

How to connect and initially configure an LNL-2220 or LNL-3300 access panel via the Web configuration page

Procedure Steps

- 1) Configure the computer IP address in the range of 192.168.0.2 to 192.168.0.254, except for 192.168.0.251 as this address is the default IP address of the LNL-2220 or LNL-3300.
- 2) Connect the LNL-2220 or LNL-3300 to the computer.
- 3) Turn DIP switch 1 OFF, 2 ON, 3 OFF, and 4 OFF.
- 4) Cycle power to the LNL-2220 or LNL-3300.
- 5) Wait approximately 30 seconds for the panel to reboot.
- 6) Browse to the following address via Internet Explorer:
<http://192.168.0.251>
- 7) Click on the link "Click here to login."
- 8) Turn DIP switch 1 ON.
- 9) Log onto the Web configuration page with a user name of "admin" and a password of "password."
- 10) After you are logged onto the Web configuration page, configure the LNL-2220 or LNL-3300 as required.
NOTE: LNL-2220 and LNL-3300 cannot be configured with the private IP range 169.254.xxx.xxx.
- 11) Turn all DIP switches OFF.
- 12) Navigate to the Apply Settings page.
- 13) Click [Apply settings and reboot].
- 14) Connect the LNL-2220 or LNL-3300 to its intended network, and then continue to configure it in System Administration.

Applies To

OnGuard (All Versions)

Additional Information

For more information, refer to the System Administration User Guide and the Hardware Installation Guide.
