

# How to connect and initially configure an LNL-2220 or LNL-3300 via the Web configuration page

Last Modified on 01/05/2022 1:13 pm EST

How to connect and initially configure an LNL-2220 or LNL-3300 access panel via the Web configuration page

## Procedure Steps

- 1) Configure the computer IP address in the range of 192.168.0.2 to 192.168.0.254, except for 192.168.0.251 as this address is the default IP address of the LNL-2220 or LNL-3300.
- 2) Connect the LNL-2220 or LNL-3300 to the computer.
- 3) Turn DIP switch 1 OFF, 2 ON, 3 OFF, and 4 OFF.
- 4) Cycle power to the LNL-2220 or LNL-3300.
- 5) Wait approximately 30 seconds for the panel to reboot.
- 6) Browse to the following address via Internet Explorer:  
<http://192.168.0.251>
- 7) Click on the link "Click here to login."
- 8) Turn DIP switch 1 ON.
- 9) Log onto the Web configuration page with a user name of "admin" and a password of "password."
- 10) After you are logged onto the Web configuration page, configure the LNL-2220 or LNL-3300 as required.  
*NOTE: LNL-2220 and LNL-3300 cannot be configured with the private IP range 169.254.xxx.xxx.*
- 11) Turn all DIP switches OFF.
- 12) Navigate to the Apply Settings page.
- 13) Click [Apply settings and reboot].
- 14) Connect the LNL-2220 or LNL-3300 to its intended network, and then continue to configure it in System Administration.

## Applies To

OnGuard (All Versions)

## Additional Information

For more information, refer to the System Administration User Guide and the Hardware Installation Guide.

---