

How to perform a channel configuration flush in System Administration for IntelligentVideo

Last Modified on 01/13/2022 4:14 pm EST

How to perform a channel configuration flush in System Administration for IntelligentVideo

Procedure Steps

- 1) In System Administration, open the IntelligentVideo screen from the **Video menu > IntelligentVideo...**
- 2) Select the **IntelligentVideo Events** tab.
- 3) Click [Channel Configuration] to open the **Video Channel Configuration** screen.
- 4) Change any parameter to a different value, then click [OK].
- 5) Click [Channel Configuration] to open the **Video Channel Configuration** screen again.
- 6) Change the parameter modified in step 4 back to its original value, then click [OK].

At this time, the channel configuration flush is complete.

Applies To

OnGuard (All versions)

IntelligentVideo (All versions)

Additional Information

None
