

# Strike Field States Cutoff on Close

Last Modified on 06/04/2025 11:29 am EDT

## Problem Overview

Strike Field States Cutoff on Close

## Detailed Description

For HID Edge devices, the **Strike** field states Cutoff on close. The actual reader strike output will cutoff on open in all cases.

## Applies To

OnGuard (All Versions)

## Additional Information

None

---