

What TCP ports need to be open for HID Edge readers to communicate?

Last Modified on 04/08/2025 12:10 pm EDT

Question

What TCP ports must be open for HID Edge readers to communicate?

Answer

When using HID Edge readers, the following TCP ports must be open on the computer running the Communication Server:

- 4050 - HID Edge reader listening port
- 4070 - HID Edge reader communication port

Ensure these ports are added as exceptions within the Windows firewall. Also, make sure these ports are not blocked or scanned by any network devices.

Applies To

OnGuard(All Versions)
HID Edge readers

Additional Information

None
