

# How to check the IC-R/W Control firmware revision on a Nisca printer

Last Modified on 06/02/2025 2:29 pm EDT

How to check the IC-RW controller firmware revision on a Nisca printer

## Procedure Steps

1. Turn on the printer.
2. Hold the [MENU] button until **User Mode** appears on the top line of the printer display.
3. Push the [EXE] button until **Push MENU Key** appears on the top line of the printer display.
4. Push the [MENU] button repeatedly until **F/W Version** appears on the top line of the printer display, and then push the [EXE] button.
5. Push the [MENU] button repeatedly until **IC-R/W Control** appears on the printer display. Below this, the firmware revision is shown.

## Applies To

Nisca printers with in-line encoders

## Additional Information

None

---