

# Relay output wiring for the LNL-1320U is incorrect

Last Modified on 06/03/2025 2:12 pm EDT

## Problem Overview

Relay Output wiring for the LNL-1320U is incorrect.

## Detailed Description

Relay Output wiring for the LNL-1320U is incorrect, as shown in the Dual Door Controller Module LNL-1320-U Quick Reference,

The documentation states that Relay 3 is the strike for Reader 2. This is incorrect.

The strike is Relay 4. Relay 3 is the Reader's Auxiliary Output 2.

## Applies To

OnGuard (All versions)

## Additional Information

---