

Relay output wiring for the LNL-1320U is incorrect

Last Modified on 12/23/2021 1:20 pm EST

Problem Overview

Relay Output wiring for the LNL-1320U is incorrect.

Detailed Description

Relay Output wiring for the LNL-1320U is incorrect, as shown in the Dual Door Controller Module LNL-1320-U Quick Reference,

The documentation states that Relay 3 is the strike for Reader 2. This is incorrect.

The strike is Relay 4. Relay 3 is the Reader's Auxiliary Output 2.

Applies To

OnGuard (All versions)

Additional Information
