

# How to move a Video Recorder from one Communication Server to another?

Last Modified on 05/23/2025 3:20 pm EDT

## Question

How do I move a Video Recorder from one Communication Server to another?

## Answer

1. In System Administration, mark the recorder(s) offline.
2. Stop the Communication Server(s) the recorder(s) point to.
3. Change the WORKSTATION for the recorder(s).
4. Mark the recorder(s) online.
5. Start the Communication Server(s).

Stopping the Communication Server the recorder originally pointed to is required to stop any communication threads that might exist between the recorder and the Communication Server.

## Applies To

LDVR (All versions)  
LNVR (All versions)  
OnGuard (All versions)  
HVR (All versions)

## Additional Information

---