

NGP "Do not activate Strike on Rex" check box does not work

Last Modified on 12/23/2021 2:03 pm EST

Symptom

The Rex input still has the strike open even when the "Do Not Activate on REX" check box is enabled.

Resolution

You must also enable the "Main Panel Controls REX processing instead of Door Controller" check box.

Applies To

NGP Panel

Additional Information
