

# How do I setup auto disarm on card read for NGP?

Last Modified on 12/28/2021 2:05 pm EST

Auto disarm on card read for NGP

## Procedure Steps

There are two options, in Areas > Arming/Disarming tab > Auto Disarm on valid token;  
In Schedule and Out of Schedule options are;

- Not Allowed
- Follow User Authority
- Force To Stay
- Force To Off

If you use Follow User Authority, you must then go to permission profiles in Access Levels, schedule-based > Auto-disarm on Entry;

- Stay
- Off
- Stay In schedule > Set timezone schedule
- Off In Schedule > Set timezone schedule

then add the areas that this is set for;

- Reader Areas
- All Areas
- Reader Areas - In Schedule
- All Areas - In Schedule

Then be sure to assign this profile to the access level for users who need it

## Applies To

NGP Panel

## Additional Information

---