

# How to enable audio on a Hybrid recorder?

Last Modified on 12/28/2021 4:32 pm EST

Enabling audio on a Hybrid recorder

## Procedure Steps

To enable the audio:

1. On the recorder, go to **C:\Program Files\Common Files\Lenel\LnrHikvisionCapSrc.config**.  
**Note:** On a 64-bit system, the path is **C:\Program Files(x86)\Common Files\Lenel\LnrHikvisionCapSrc.config**.
2. Find: **false**.
3. Change to: **true**.

## Applies To

OnGuard (All Versions), HVR (All Versions)

## Additional Information

---