

# How do I setup scheduled area arming and disarming on NGP?

Last Modified on 01/07/2022 3:32 pm EST

## Question

How do I setup scheduled area arming and disarming on NGP?

## Answer

In areas for the NGP panel, you need to enter a timezone in the Schedule field. This timezone is configured in Timezones. The start time is the time the area will disarm, and the end time is the time the area will arm. The In Schedule drop-down is the amount of time before the area will re-arm after being disarmed inside the schedule. The options are 30 minutes, 2 hours, or Max (which is the next arming schedule). This is the same for the Out of Schedule drop down. You must also select Auto Arm on Fail to close and Always Auto disarm (blind).

## Applies To

OnGuard (All versions)

## Additional Information

---