

# Why does the ISC firmware appear as 'Not Current' in Alarm Monitoring?

Last Modified on 12/28/2021 2:15 pm EST

## Question

Why does the ISC firmware appear as **Not Current** in Alarm Monitoring?

## Answer

The current versions of firmware for each version of OnGuard are listed in the **LnlFwVersions.ini** file.

For example:

```
[Lenel]  
LNL-500=3.120  
LNL-1000=3.120  
LNL-2000=3.120  
LNL-2220=1.118  
LNL-2210=1.118  
LNL-3300=1.118  
LNL-NGP=1.01.116
```

This file can be found in the Windows directory.

If the current firmware of an ISC is less than what is listed in LnlFwVersions.ini, Alarm Monitoring shows the firmware as **Not Current**.

## Applies To

OnGuard (All versions)

## Additional Information

---