

# How to configure Interlogix cameras for use with OnGuard and LenelS2 NVR

Last Modified on 02/16/2023 4:09 pm EST

In order to ensure that OnGuard and LenelS2 NVR properly communicate with Interlogix cameras, follow the steps below.

## Procedure Steps

1. On the camera or encoder webpage, navigate to **Configuration > Image**.
2. Change the profile to use the **Basic (Base) Profile**.
3. Change the **I-Frame** interval to match the FPS.
4. Confirm the bitrate is set to a value that is realistic.

## Applies To

LNVR (All versions); OnGuard (All versions)

## Additional Information

---