

Readers Not Sending Information To Alarm Monitor (2RP and HID Weigand Readers)

Last Modified on 01/11/2022 10:54 am EST

Symptom

Readers are not sending information to the alarm monitor on 2RP board with HID readers Wiegand format.

Resolution

1. HID uses 5 volt Data. Set the 2RP for 5 VDC.
2. If using an external power supply, connect (-) from the external power supply to Pin 2 (Common) on the 2RP board.

Applies To

FCWnx

Additional Information
