

How do I log out of the Guardall PX/QX/RX LCD Keypad?

Last Modified on 05/06/2025 12:52 pm EDT

Question

How do I log out of the Guardall PX/QX/RX LCD Keypad?

Answer

To log out of the LCD Keypad, press the X key followed by the "confirm" or check mark key.

Applies To

Guardall PX/QX/RX Control Panels

Additional Information

None
