"String data write truncated" error occurs when adding an LNL-1200 to an elevator reader

Last Modified on 05/23/2025 10:21 am EDT

Symptom

"String Data right truncation" error message appears when adding an LNL-1200 module to an elevator reader.

Resolution

This error occurs when there are too many characters in the elevator reader name. When applying the LNL-1200 to an elevator reader, the number of characters is limited to 48.

Applies To

OnGuard (all versions)

Additional Information

None