

LNL-3300-ACUXL will not power up

Last Modified on 06/02/2025 4:56 pm EDT

Symptom

LNL-3300-ACUXL will not power up

Resolution

When setting up a LNL-3300-ACUXL you may have to switch the wire (traditionally yellow) for the earth ground from terminal 2 to terminal 3 on TB1 in order for the panel to power on.

TB1 Pin#	ACUXL Connector Label	Signal Description
1	+27 VDC	+27 VDC Input Power
2	0V	Earth Ground
3	0V	Ground
4	+12 VDC	+12V Output Power (.25 A max.)

Applies To

LNL-3300-ACUXL

Additional Information

None
