

Client wants limit port range used by LNVR and DCOM connections.

Last Modified on 05/22/2025 9:27 am EDT

How to limit port range used by Lenel NVR and DCOM connections

Procedure Steps

Run LNVR Network Manager on the recorder.

1. Change the port range to a custom-defined range. Use the following shell commands to change the default DCOM port range, with "start" being the first port and "num" being the port count:
netsh int ipv4 set dynamicport tcp start=2001 num=299
netsh int ipv4 set dynamicport udp start=2001 num=299
2. Use the following shell commands to see the current port range:
netsh int ipv4 show dynamicport tcp
netsh int ipv4 show dynamicport udp

Applies To

Lenel NVR

Additional Information

© 2024 Honeywell International Inc. All Rights Reserved.
