

# How to enable a PIV or CAC enrollment reader

Last Modified on 06/04/2025 3:49 pm EDT

How to enable a PIV or CAC enrollment reader.

## Procedure Steps

In System Administration, select **Administration > Workstations**.

1. Click [Add] at the bottom and add your workstation.
2. Click [Browse] next to Name and select your computer.
3. Leave all other settings default and click [OK].
4. Select the **Encoders/Scanners** tab.
5. Click [Add] to create a new encoder.
6. Provide the new encoder with a name, and select the workstation you just created.
7. Under **Device type**, select **PC/SC Encoder**.
8. Under Credential technology, leave the default setting **Contact Smart Chip**.

The screenshot displays the 'Encoders/Scanners' configuration window. On the left, a list of encoders includes 'Omnikey 3121'. The right pane shows the configuration for the selected encoder under the 'General' tab. The fields are as follows:

Field	Value
Name	Omnikey 3121
Workstation	ACCESSCT-SERVER
Device type	PC/SC Encoder
Credential technology	Contact Smart Chip
Supported applications	CMS, Credential Agent

9. Select the **Location** tab and leave it marked as a stand-alone device.
10. Select the **Communications** tab.
11. Select the driver for the Omnikey reader you connected to the workstation.
12. Click [OK] to save the device.



## Applies To

OnGuard 7.2 and later

## Additional Information

You can obtain the latest driver from the manufacturer's website.

© 2024 Honeywell International Inc. All Rights Reserved.