


# How to configure timed area anti passback in NGP

Last Modified on 11/14/2024 12:42 pm EST

Timed Anti-passback in NGP

## Procedure Steps

1. Go to system admin > access control > areas
2. Select NGP default area
3. To the right under general:
4. Check strict entry/exit enforcement
5. Check ignore outside to inside area check ( if you are not using egress reader)
6. Select the needed time for Auto reset drop down menu
7. Click ok

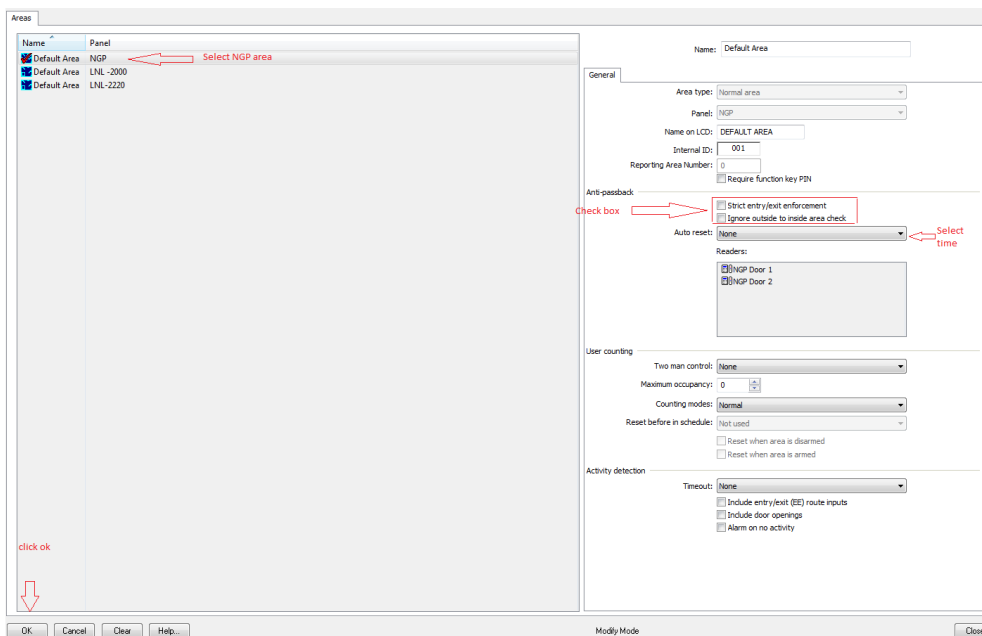

## Applies To

OnGuard (all versions)

## Additional Information

None

