

# No option to configure settings on LNL-CK reader

Last Modified on 05/08/2025 4:47 pm EDT

## Symptom

When configuring the LNL-CK reader, the user is not prompted with the option to configure address, baud rate, etc. The reader may power up, prompt to click the two keys to start configuration, and then display a message similar to "0001006049-1.63B" before seemingly freezing up and leaving the configuration setup.

## Resolution

Once you power up the LNL-CK reader and get the option to use two-key set up, proceed until you see the message shown in the symptom and then press the F1 button to continue to next screen and continue configuring the address, baud rate, etc.

## Applies To

LNL-CK readers

## Additional Information

N/A

© 2024 Honeywell International Inc. All Rights Reserved.

---