

# Granted Access by Badge ID with Video Pop-up in Alarm Monitoring

Last Modified on 03/20/2023 9:42 am EDT

## Symptom


Granted Access by Badge ID with Video Pop-up in Alarm Monitoring

## Resolution

**Step One:** Modify current alarm in Alarm Definitions.

*System Administration > Monitoring > Alarms > Alarm Definitions*

1. Select **Relay Contact Activated** in Alarm list.
2. Click [Modify].
3. Select the check boxes **Display alarm** and **Active alarm**.
4. Click [OK].

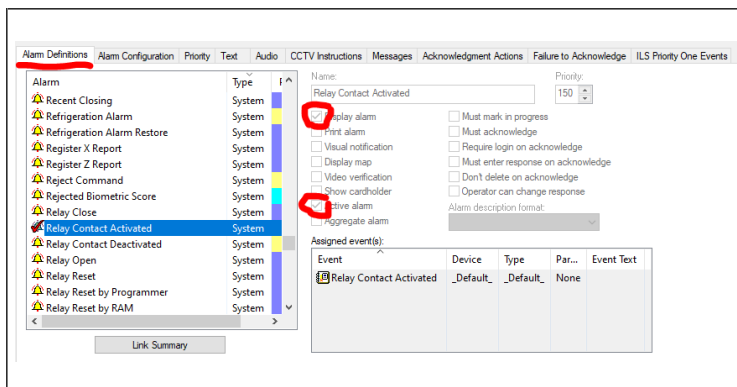


**Step Two:** Configure Global I/O.

*System Administration > Access Control > Global I/O*

1. Click [Add].
2. On **Global Linkage** tab:
  - a. **Name** the task.
  - b. Choose **Timezone**.
    - i. Always chosen in this screenshot.
3. On **Input Event** tab:
  - a. Click [Add].
  - b. Under **Device**, select **Reader**.
  - c. Under **Event**, select **Access Granted**.
  - d. Enter the desired badge for access in the **Badge Number** field.
  - e. Click [OK].
4. On **Output Action** tab:


- a. Click [Add].
  - i. Under **Objects**, select **Device Output**.
- b. Click [Next].
  - a. Select **Auxiliary Output 1** for the reader selected on the **Input Event** tab.
  - b. Under **Operation**, select **Pulse**.
  - c. Click [OK].
- c. Click [OK] on **Global Linkage** window.

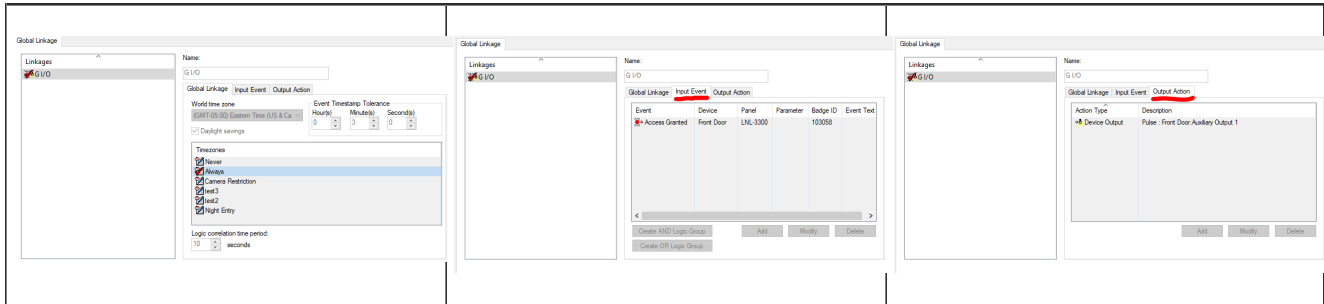

**Step Three:** Configure Device – Camera Link.

*System Administration > Video > Digital Video > Device – Camera Links*


1. Click [Add].
2. Select **Device**:
  - a. Under **Device Type**, select **Reader Output**.
  - b. Under **Search Device by Panel** filter, select **Access Panel**.
  - c. Select desired **Reader AuxOut1**.
  - d. Click [Next].
3. Select camera(s):
  - a. Under **Video Recorder**, select the desired recorder.
  - b. Select desired camera. Camera will appear in **Linked Camera(s)** table.
4. Click [Save Link(s)].
5. Click [Finish].

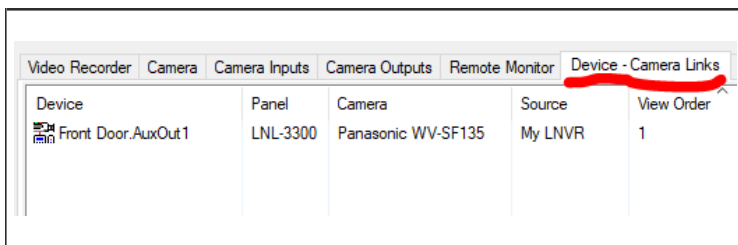

**Step Four:** Configure Alarm – Video Configuration.


*System Administration > Video > Digital Video > Alarm – Video Configuration*

1. Select **Relay Contact Activated** in Alarm list.
2. Click [Modify].
3. Enable **Automatically Launch Video Player on Alarm**.
4. Click [OK].

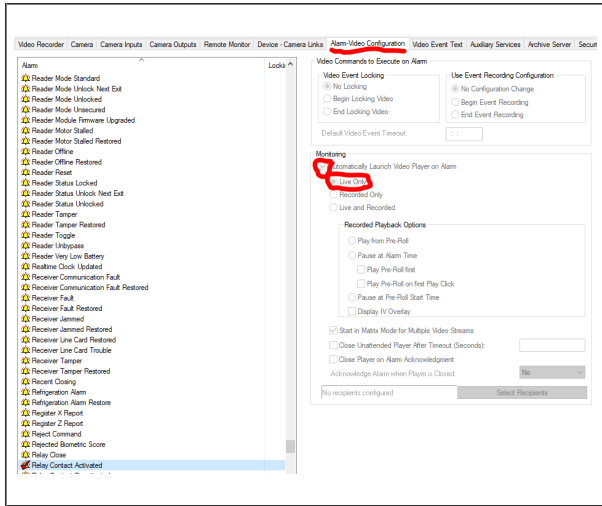

### Step Five: Configure Alarm Monitoring.

1. Enable the following options:
  - o Refresh Alarm Configuration
  - o Automatic Live Video Display
  - o Launch Video for Active Alarm

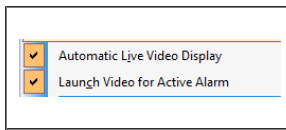

## Applies To

All versions of OnGuard

## Additional Information

Copyright © 2023 Carrier. All rights reserved.