

Granted Access by Badge ID with Video Pop-up in Alarm Monitoring

Last Modified on 03/25/2025 11:27 am EDT

Symptom


Granted Access by Badge ID with Video Pop-up in Alarm Monitoring

Resolution

Step One: Modify current alarm in Alarm Definitions.

System Administration > Monitoring > Alarms > Alarm Definitions

1. Select **Relay Contact Activated** in Alarm list.
2. Click [Modify].
3. Select the check boxes **Display alarm** and **Active alarm**.
4. Click [OK].

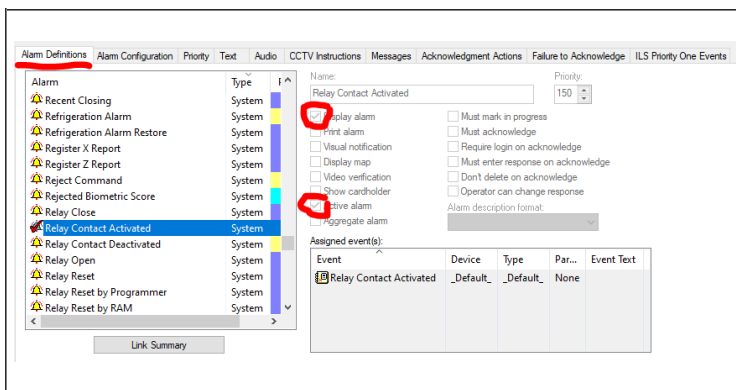


Step Two: Configure Global I/O.

System Administration > Access Control > Global I/O

1. Click [Add].
2. On **Global Linkage** tab:
 - a. **Name** the task.
 - b. Choose **Timezone**.
 - i. Always chosen in this screenshot.
3. On **Input Event** tab:
 - a. Click [Add].
 - b. Under **Device**, select **Reader**.
 - c. Under **Event**, select **Access Granted**.
 - d. Enter the desired badge for access in the **Badge Number** field.
 - e. Click [OK].
4. On **Output Action** tab:


- a. Click [Add].
 - i. Under **Objects**, select **Device Output**.
- b. Click [Next].
 - a. Select **Auxiliary Output 1** for the reader selected on the **Input Event** tab.
 - b. Under **Operation**, select **Pulse**.
 - c. Click [OK].
- c. Click [OK] on **Global Linkage** window.

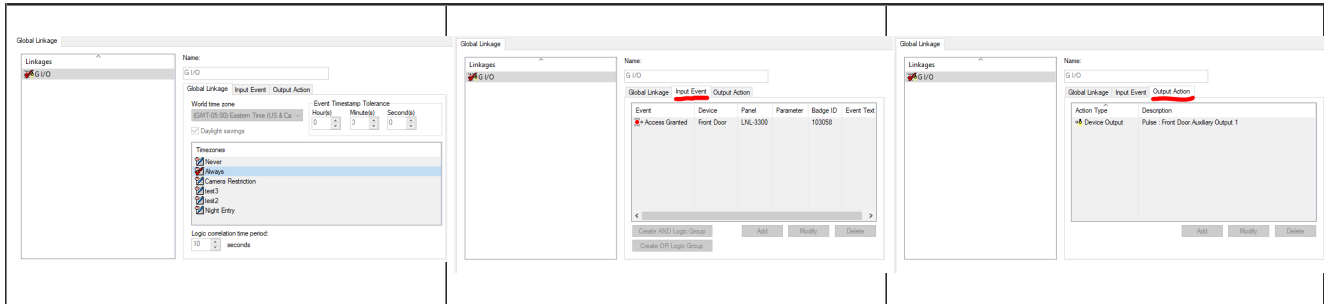

Step Three: Configure Device – Camera Link.

System Administration > Video > Digital Video > Device – Camera Links


1. Click [Add].
2. Select **Device**:
 - a. Under **Device Type**, select **Reader Output**.
 - b. Under **Search Device by Panel** filter, select **Access Panel**.
 - c. Select desired **Reader AuxOut1**.
 - d. Click [Next].
3. Select camera(s):
 - a. Under **Video Recorder**, select the desired recorder.
 - b. Select desired camera. Camera will appear in **Linked Camera(s)** table.
4. Click [Save Link(s)].
5. Click [Finish].

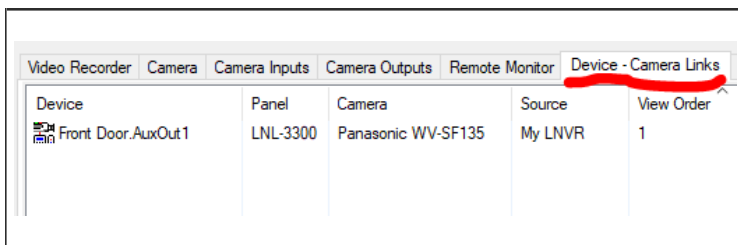

Step Four: Configure Alarm – Video Configuration.


System Administration > Video > Digital Video > Alarm – Video Configuration

1. Select **Relay Contact Activated** in Alarm list.
2. Click [Modify].
3. Enable **Automatically Launch Video Player on Alarm**.
4. Click [OK].

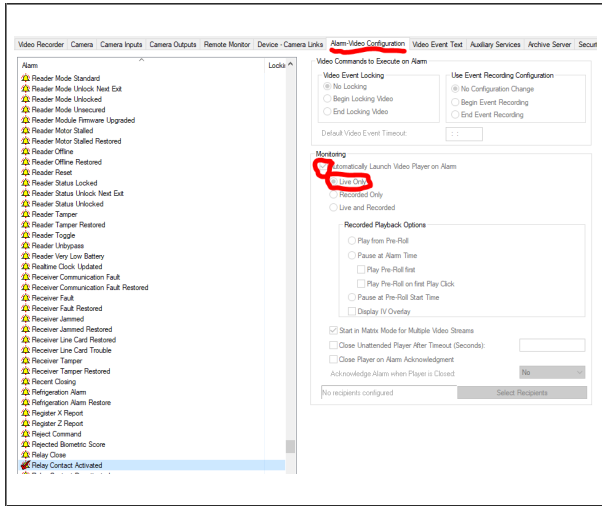

Step Five: Configure Alarm Monitoring.

1. Enable the following options:
 - Refresh Alarm Configuration
 - Automatic Live Video Display
 - Launch Video for Active Alarm

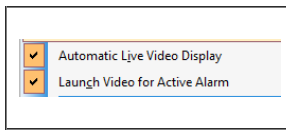

Applies To

All versions of OnGuard

Additional Information

© 2024 Honeywell International Inc. All Rights Reserved.